



GUIDE DE POSE DES RADIATEURS
PLAATSINGSWIJZE VAN DE RADIATOREN
FITTING INSTRUCTIONS
ISTRUZIONI PER L'INSTALLAZIONE DEI RADIATORI
GUIA DE INSTALACION DE RADIADORES
BEFESTIGUNGSHINWEISE HEIZKÖRPER

DESIGNATION	L	H ±2,5	A	B	C	D
TAF-050-052	521	580	90	320	360	60
TAF-075-060	601	580	90	400	360	60
TAF-100-076	761	580	90	560	360	60
TAF-125-084	841	580	90	640	360	60
TAF-150-100	1001	580	170	640	360	60
TAF-200-123	1241	580	170	880	360	60



