

9 = 7



		500 → 1600 mm	>1600 → 3200 mm	>3200 → 4000 mm
WBK 0	<p>C-08-06, CW-08-06 C-15-06, CW-15-06 C-23-06, CW-23-06 C-31-06, CW-31-06</p>	x 2 	x 3 	x 4
WBK 1	<p>C-08-10, CW-08-10, C-08-13 C-15-10, CW-15-10, C-15-13 C-23-10, CW-23-10, C-23-13 C-31-10, CW-31-10, C-31-13</p>			
WBK 2	<p>C-08-19, CW-08-19, C-08-22 C-15-19, CW-15-19, C-15-22 C-23-19, CW-23-19</p>			
WBK 1	<p>C-08-14, CW-08-14 C-15-14, CW-15-14 C-23-14, CW-23-14 C-31-14, CW-31-14</p>	x 3 	x 4 	


		500 → 1200mm	>1200 → 2100 mm	>2100 → 2400mm	>2400 → 3000mm	>3000 → 4000mm
WBK 2	<p>C-23-22, C-08-23, CW-08-23 C-31-22, C-15-23, CW-15-23 C-31-19, C-23-23, CW-23-23 CW-31-19, C-31-23, CW-31-23</p>	x 2 	x 3 	x 4 		
WBK 3	<p>C-08-28, CW-08-28 C-15-28, CW-15-28</p>					
WBK 3	<p>C-23-28, CW-23-28 C-31-28, CW-31-28</p>	x 2 	x 3 	x 4 	x 5 	

9 = 7



		500 → 1600mm	>1600 → 3200mm	>3200 → 4000mm
WBK 1	<p>C-08-10, CW-08-10, C-08-13</p> <p>C-15-10, CW-15-10, C-15-13</p> <p>C-23-10, CW-23-10, C-23-13</p> <p>C-31-10, CW-31-10, C31-13</p>	<p>x 2</p>	<p>x 3</p>	<p>x 4</p>
WBK 1	<p>C-08-14, CW-08-14</p> <p>C-15-14, CW-15-14</p> <p>C-23-14, CW-23-14</p> <p>C-31-14, CW-31-14</p>	<p>x 3</p>	<p>x 4</p>	<p>x 4</p>
WBK 2	<p>C-08-19, CW-08-19</p> <p>C-15-19, CW-15-19</p> <p>C-23-19, CW-23-19</p>	<p>x 2</p>	<p>x 3</p>	<p>x 4</p>

		500 → 1200mm	>1200 → 2400mm	>2400 → 4000mm
WBK 2	<p>C-31-19, CW-31-19</p>	<p>x 2</p>	<p>x 3</p>	<p>x 4</p>

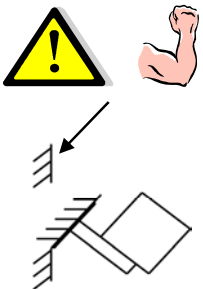

- ① X = 105mm
- ② X = 140mm
- ③ X = 151mm
- ④ X = 190mm

